

Indispensable™ Snack 'n More Dispenser Assembly Instructions for RAM 100/101/103/105 Model

+ Assembling

1. Carefully remove the dispenser from the packaging.
2. It is recommended to wash the container stand and rubber blade (see diagram) before using.

+ Disassembling

1. Remove lid.
2. Pull knob out.
3. Remove the rubber blade by carefully pulling it out through the top of the container.

+ Cleaning

1. Disassemble the dispenser (follow steps above).
2. Wash the parts in warm water with soap - never use an abrasive sponge or cloth.
3. Make sure that all parts are completely dry before reassembling.
4. To reassemble:
 - Insert the rubber blade into the container (note that the blade is marked "front")
 - Insert the knob into the rubber blade, pushing it all the way through and turning it until you feel a click
 - Place the lid back on the container.

This product will be free from defects in material and workmanship for 90 days from the date of its original purchase. If such a defect appears during the warranty, we will repair or replace your product without charge. Simply return the product, postage prepaid, along with the original dated receipt to:

Zevro
2340 W. Touhy Ave., Suite D
Chicago, IL 60645
USA

WARRANTY

2340 W. Touhy Ave., Suite D
Chicago, IL 60645
USA
www.zevro.com
800.313.8588 (toll free)
773.381.9056 (phone)
773.381.9067 (fax)
info@zevro.com

Z | e | v | r | o | ™

